


1 Manual trike bench (longitudinal)

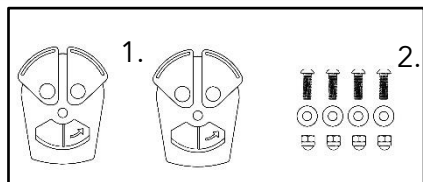



Overview of parts

1. Seatbelt (2x), 2. Bolt M6x20 (4x) + Washer M6 (4x) + Nut M6 (4x).

Note: The other parts needed have to be reused from the existing benches.

Step 1: Remove the existing benches

Remove the two existing benches and their supports. All the parts except the bench will be reused

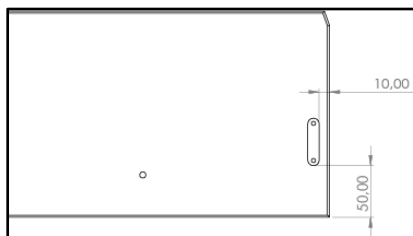
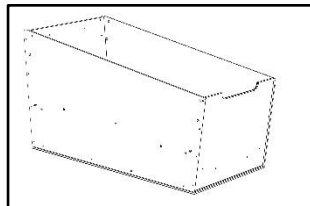


Step 2: Replace the magnet strip

The magnet strips (+ screws) from the existing benches will be reused on the new benches. Make sure they are placed on the correct side of the bench, see the illustration above.

Step 3. Drill holes (frontside)


Drill 4 hole with a diameter of 6,5 mm and 2 holes with a diameter of 4 mm in the front of the box

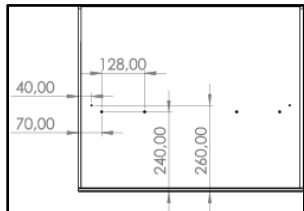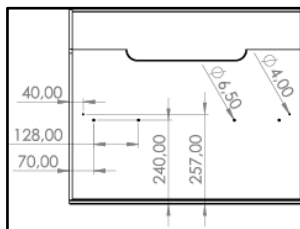

Step 4. Drill holes (backside)

Drill 4 holes with a diameter of 6,5 mm and 2 holes with a diameter of 4 mm in the backside of the box

2 Manual trike bench (longitudinal)


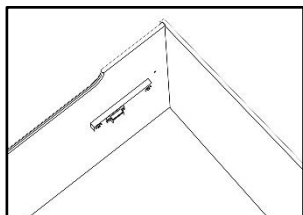


Step 5: Mount the bench supports

Mount the 4 bench supports in the box with the existing bolts and nuts. The support with the magnet needs to be mounted in the front.

Step 6: Mount the benches

Mount the two new benches with the existing screws.

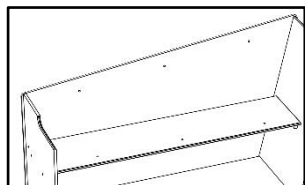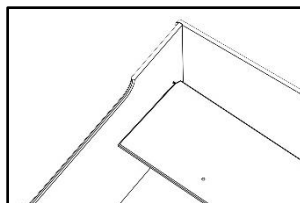

Step 7: Drill holes and mount the seatbelts

Drill 3 holes aligned with the holes in the bench approximately 50 mm from the top with a diameter of 6 mm